

CURVED MOUNT BRACKET HARDWARE ASSEMBLY

TOOLS NEEDED:
Socket Wrench 1/2"


Metalcraft uses 3/8" drill bits for drilling holes in the pole

Flat washers, nuts and bolts are all
18-8 stainless steel with a black oxide coating

PARTS LIST EACH SET:

Generally, two sets are needed for each bracket

- 1 - Bolt
- 2 - Flat Washers
- 1 - Cast/Curved Aluminum Washer
- 1 - Nut

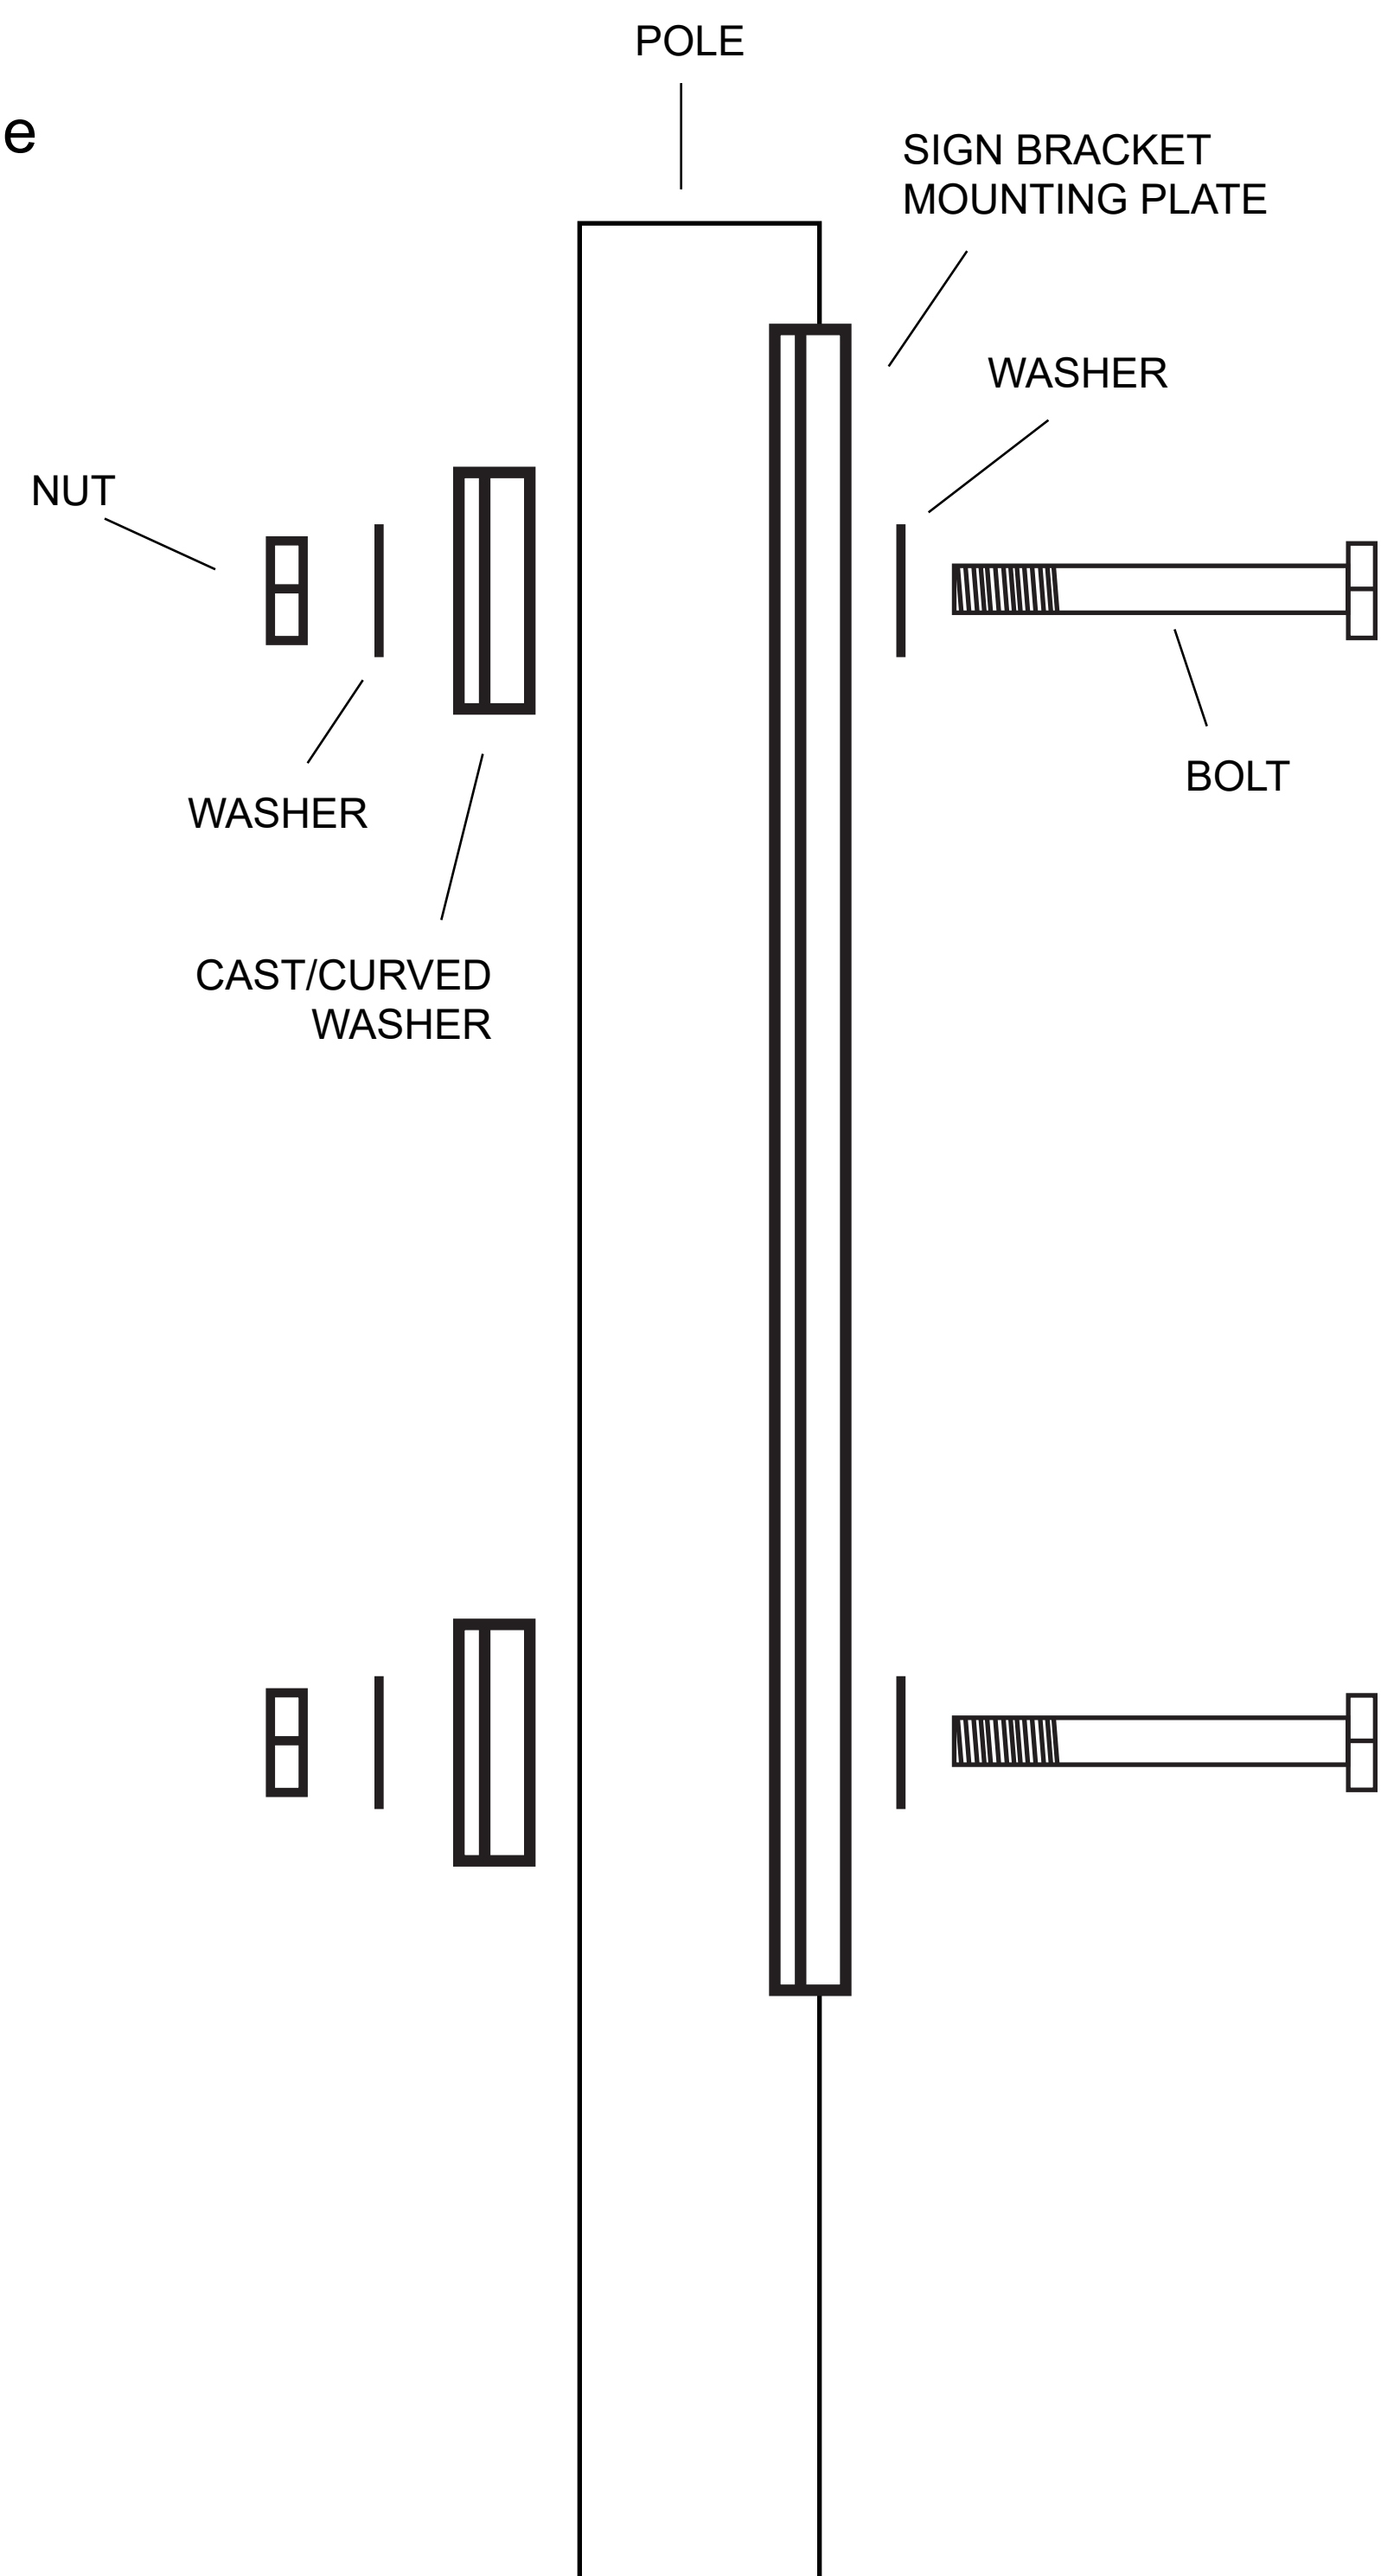

**Illustrations are not to scale*