
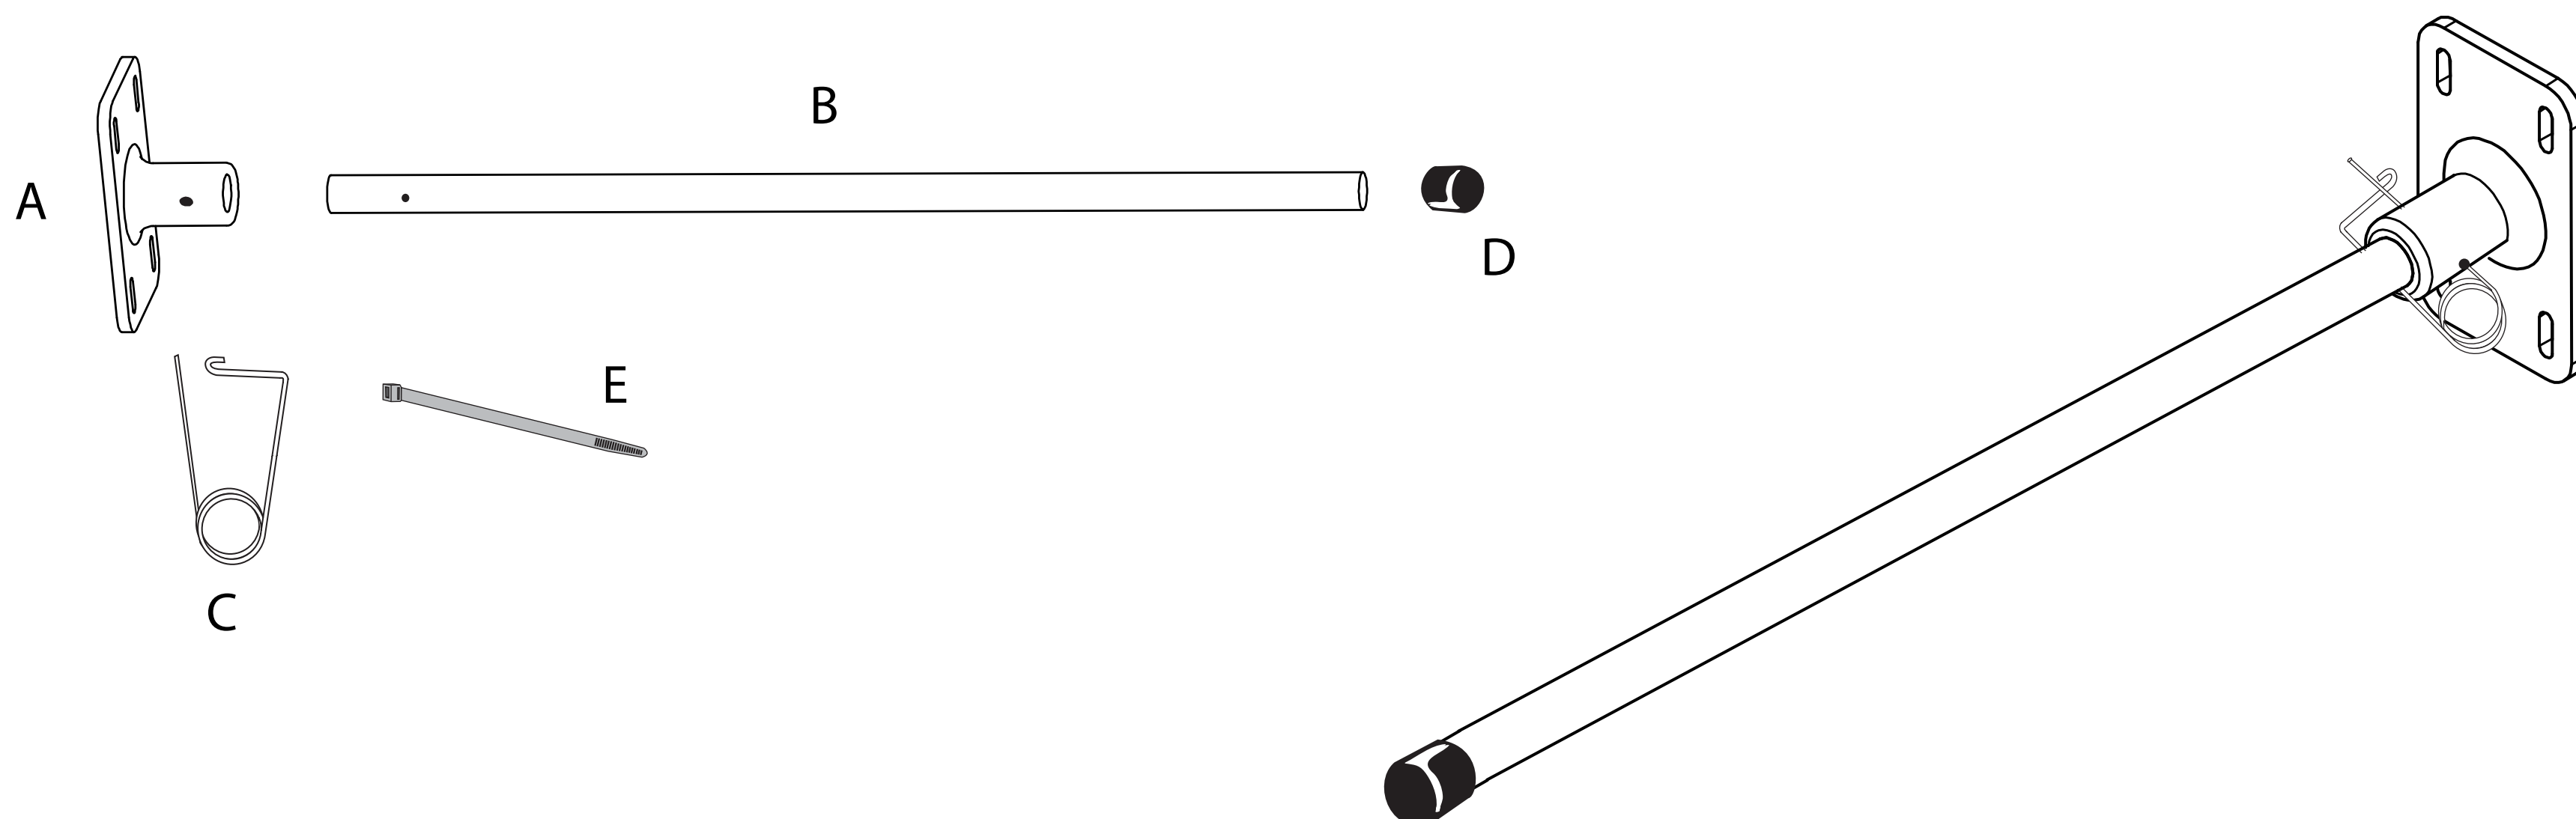


FLAT MOUNT BANNER BRACKET ASSEMBLY INSTRUCTIONS (Aluminum Rods)

PARTS LIST:

- 2 - Banner Bracket Mounts (A)
- 2 - Aluminum Rods (B)
- 2 - EZ Fastener Pins (C)
- 2 - End Caps (D)
- 2 - Zip Ties (E)

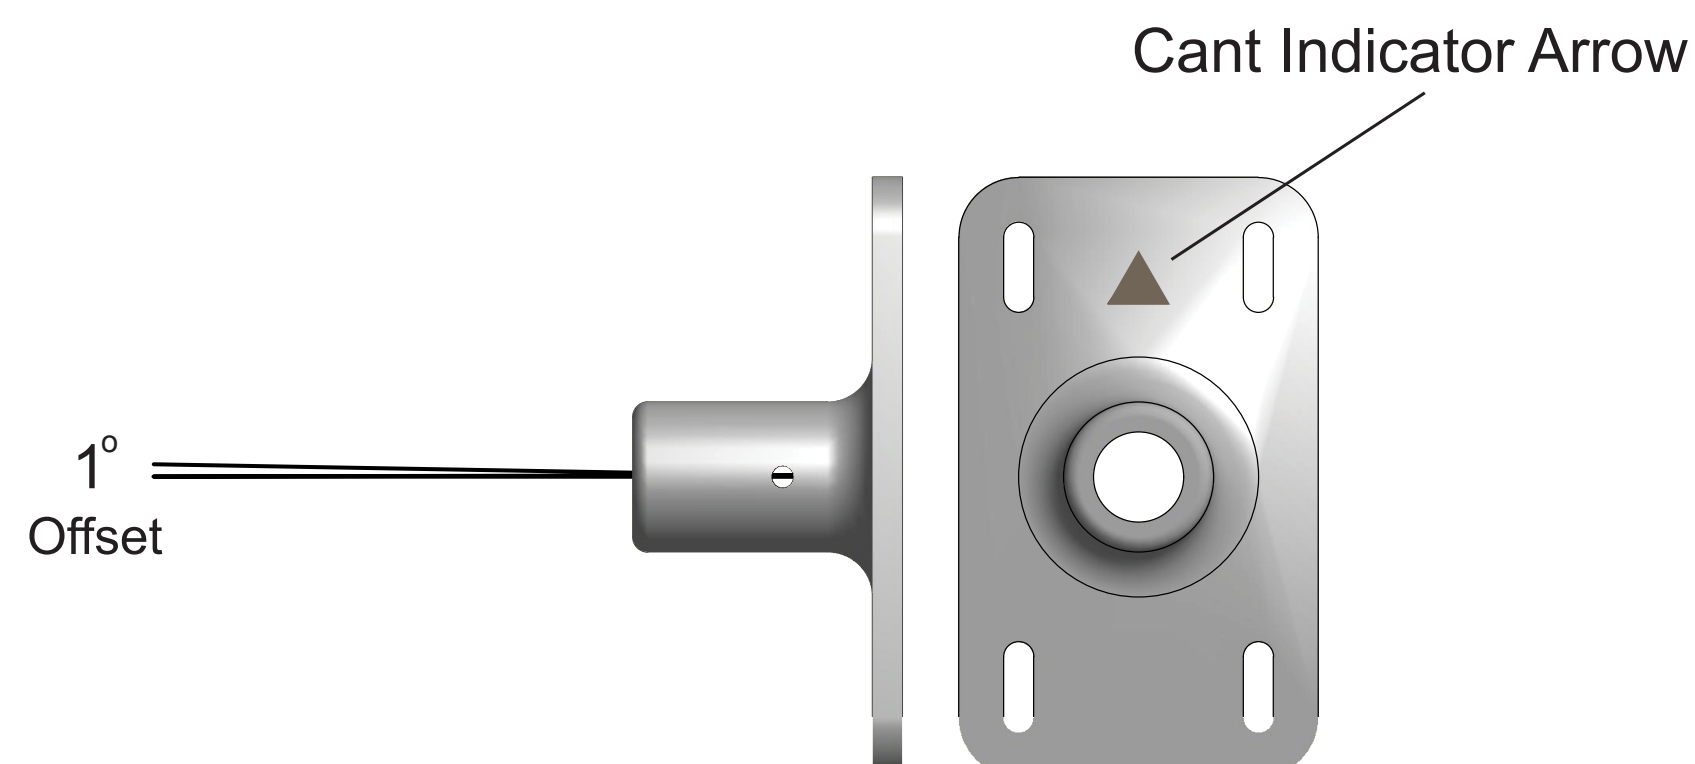

**Illustrations are not to scale*

IMPORTANT NOTE:

Mounts have a 1 degree cant to provide tension on the banner.
Arrows stamped in mount should point away from each other.
Top bracket points up and bottom bracket points down.

1. Measure spacing, mark and install both brackets (A). Measurement should be from the center of the bracket sides.
2. Install banner rods (B) in each bracket, with the hole aligned to the hole in side of the bracket (A).
3. Insert EZ fastener pin (C) into the bracket hole to secure the pole to the bracket and fasten. Repeat for both rods.
4. Install end cap (D) to the end of rod (B).
5. Slide banner pockets over rods, evenly, until in desired position. Attach a zip tie (E) through the banner's grommet and the circular end of the EZ fastener pin (C) to prevent the banner from sliding out of position.