

CURVED MOUNT BRACKET HARDWARE ASSEMBLY

TOOLS NEEDED:

- 1 - Allen Wrench 3/16"
- 2 - Socket Wrenches 1/2"


Metalcraft uses 3/8" drill bits for drilling holes in the pole

Lock washers, flat washers, nuts and bolts are all 18-8 stainless steel with a black oxide coating.

PARTS LIST EACH SET:

Generally - two sets are needed for each sign

- 1 - Bolt
- 1 - Washer
- 1 - Cast/Curved Aluminum Washer
- 1 - Lock Washer
- 1 - Nut

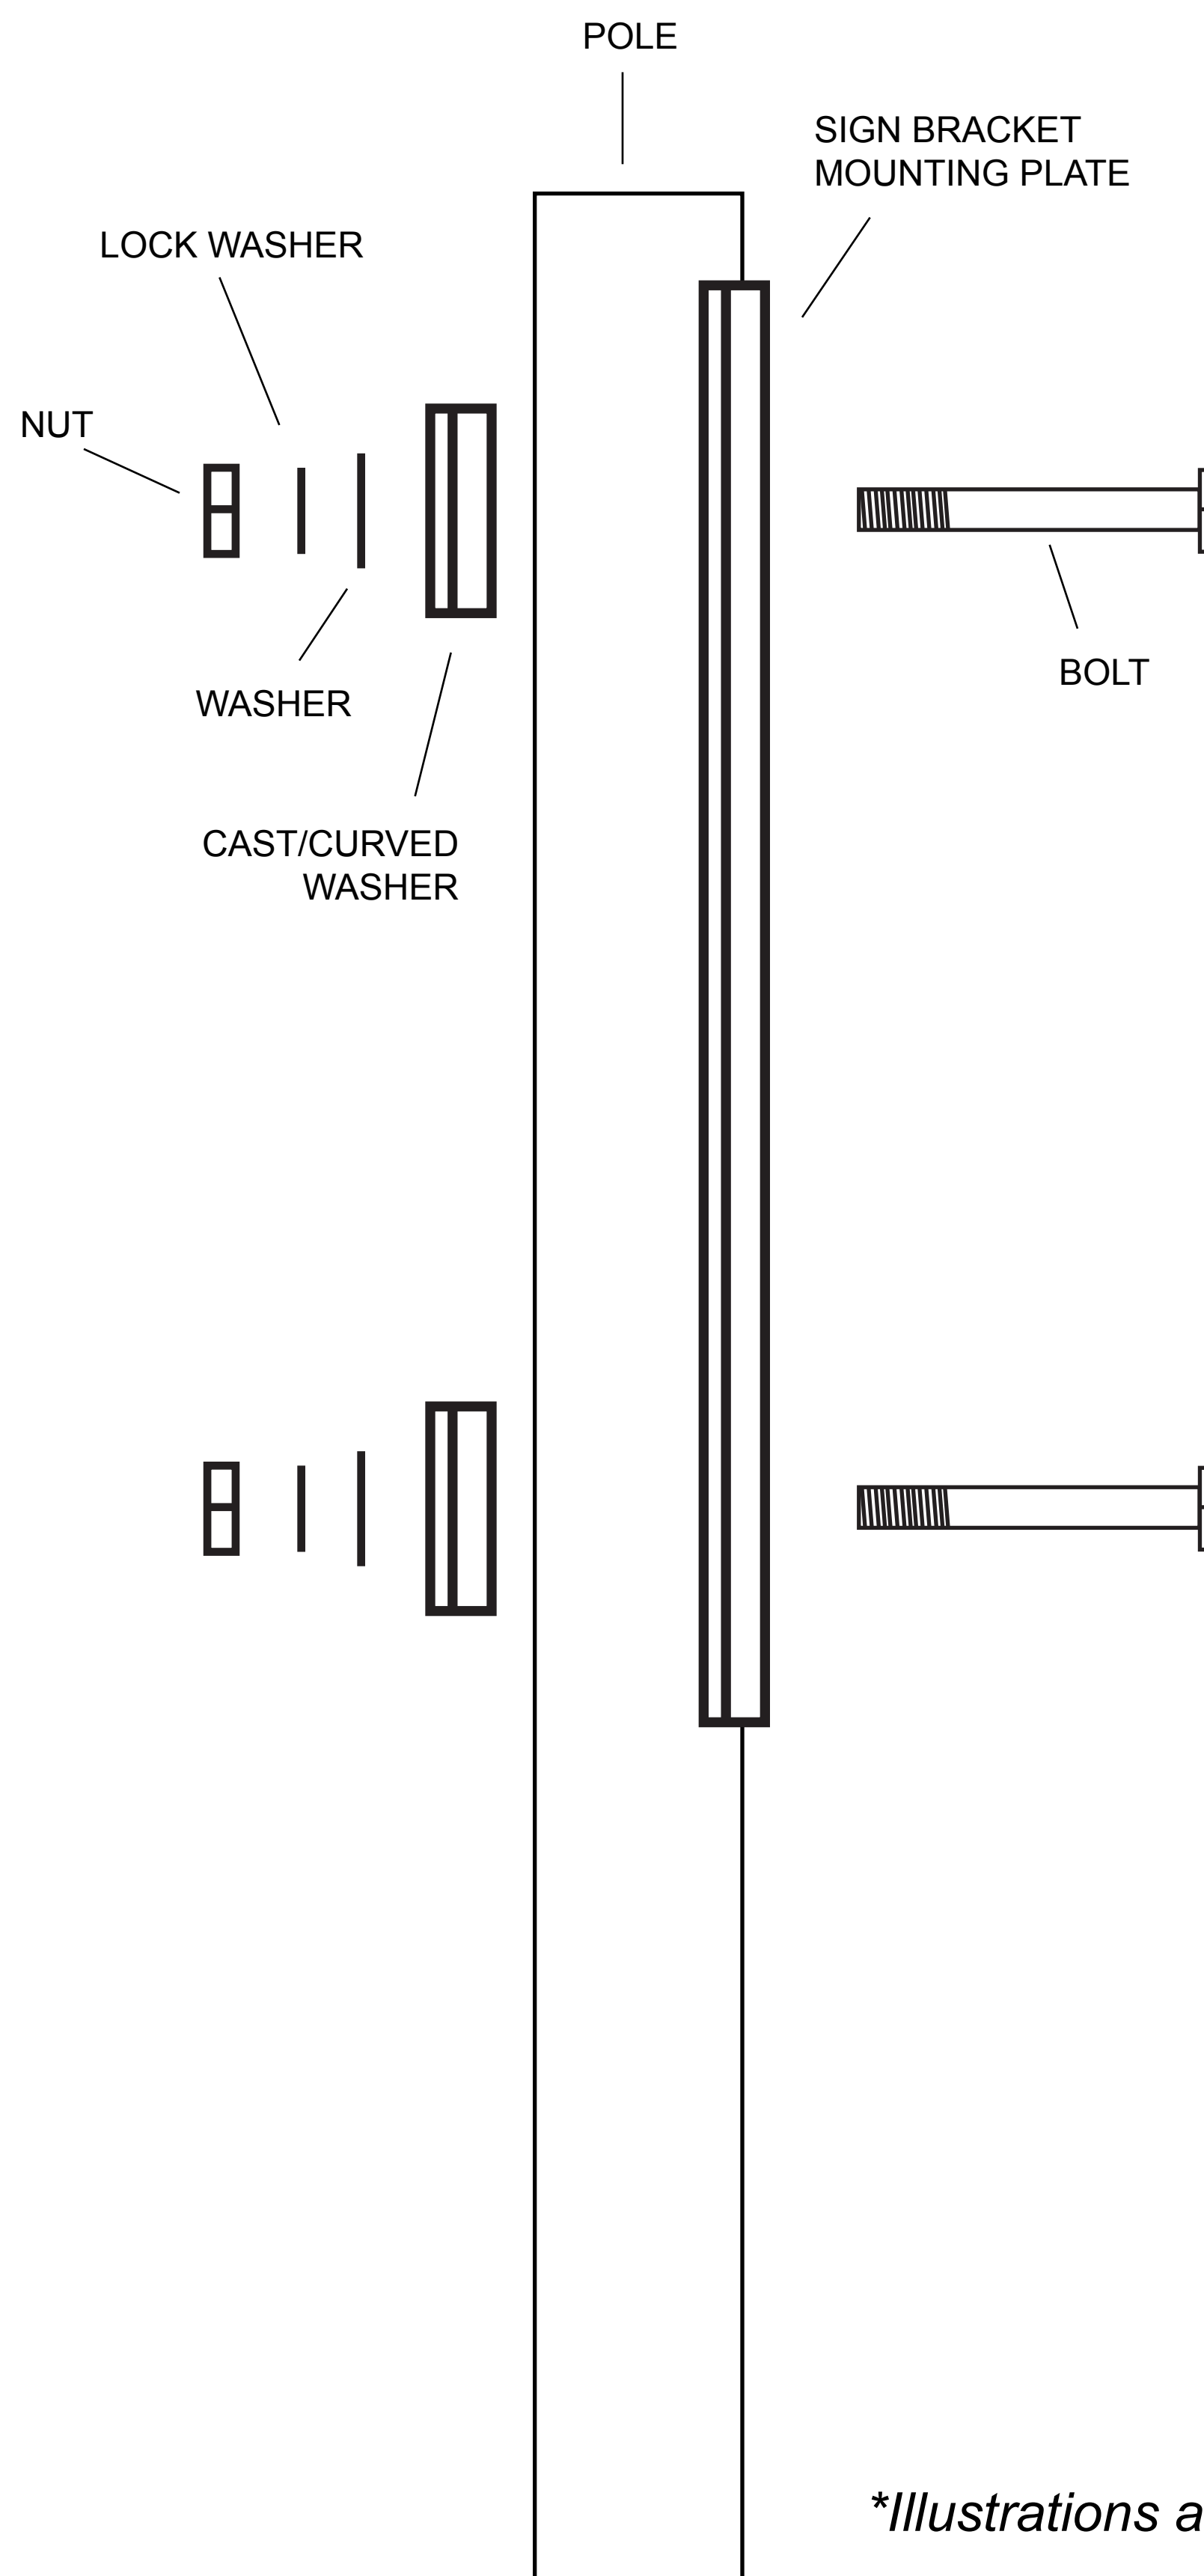

**Illustrations are not to scale*